



Technical Specifications

Product Description

The new TripleGrip™ is one of the most technologically advanced anchor on the market. Designed with 2 expandable wings that grip tightly behind drywall for maximum holding power. Advanced cam action technology expands inside drywall to give more stability and strength and 2 lateral wings that hold the anchor in place, preventing any rotation while the screw is inserted.

Features & Benefits

- Easy to install
- Superior holding power
- 2 expandable wings that grip tightly behind drywall
- 2 lateral wings hold the anchor in place

Perfect for:







Curtain road, towel bars, address, etc...

Packaging:







Canada: (514) 354-2240

Triple **Gr**p Triple **Gr**



Product sizes & Materials

Polyethylene

#6 (Beige) - 3.5mm (yellow) # 8 (Grey) - 4mm (white) # 10 (Blue) - 5mm (blue) # 12 (Green) - 6mm (gray)

Suitable Base Materials

- Wallboard 10mm Drywall 3/8
- Wallboard 13mm Drywall 1/2
- Wallboard 16mm Drywall 5/8
- Plaster
- Brick
- Concrete
- Ceramic tile







Technical Specifications





Load Capacities

	Material	Size	Material	Drill Size	PULL MAX Ibs	PULL SAFE Ibs	SHEAR MAX Ibs	SHEAR SAFE Ibs	MAX kg	SAFE kg	SHEAR MAX kg	SHEAR SAFE kg
	Drywall 3/8 Wallboard 10 mm	#6 (Beige) - 3.5mm	Polyethylene	1/4"	32	16	52	26	15	7	24	12
В		# 8 (Grey) - 4mm	Polyethylene	1/4"	35	18	60	30	16	8	27	14
-		# 10 (Blue) - 5mm	Polyethylene	5/16"	45	23	75	38	20	10	34	17
		# 12 (Green) - 6mm	Polyethylene	3/8"	60	30	90	45	27	14	41	20

	Material	Size	Material	Drill Size	MAX Ibs	SAFE Ibs	MAX Ibs	SAFE Ibs	MAX kg	SAFE kg	MAX kg	SHEAR SAFE kg
	Drywall 1/2 Wallboard 13 mm	#6 (Beige) - 3.5mm	Polyethylene	1/4"	36	18	58	29	16	8	26	13
		# 8 (Grey) - 4mm	Polyethylene	1/4"	42	21	70	35	19	10	32	16
		# 10 (Blue) - 5mm	Polyethylene	5/16"	58	29	92	46	26	13	42	21
		# 12 (Green) - 6mm	Polyethylene	3/8"	74	37	121	61	34	17	55	27

	Material	Size	Material	Drill Size	PULL MAX Ibs	PULL SAFE Ibs	SHEAR MAX Ibs	SHEAR SAFE Ibs	PULL MAX kg	PULL SAFE kg	SHEAR MAX kg	SHEAR SAFE kg
	Drywall 5/8 Wallboard 16 mm	#6 (Beige) - 3.5mm	Polyethylene	1/4"	60	30	91	46	27	14	41	21
		# 8 (Grey) - 4mm	Polyethylene	1/4"	64	32	102	51	29	15	46	23
-		# 10 (Blue) - 5mm	Polyethylene	5/16"	88	44	154	77	40	20	70	35
		# 12 (Green) - 6mm	Polyethylene	3/8"	132	66	204	102	60	30	93	46

Material	Size	Material	Drill Size	PULL MAX Ibs	PULL SAFE Ibs	SHEAR MAX Ibs	SHEAR SAFE Ibs	PULL MAX kg	PULL SAFE kg	SHEAR MAX kg	SHEAR SAFE kg
	# 6 (Beige) - 3.5mm	Polyethylene	1/4"	240	120	400	200	109	54	181	91
Concrete	# 8 (Grey) - 4mm	Polyethylene	1/4"	275	138	500	250	125	62	227	113
3000 PSI	# 10 (Blue) - 5mm	Polyethylene	5/16"	400	200	800	400	181	91	363	181
	# 12 (Green) - 6mm	Polyethylene	3/8"	500	250	900	450	227	113	408	204

^{**}Always use safe load capacity

Cobra Anchors Ltd. 1-800-824-7717

Canada: (514) 354-2240





Technical Specifications




Tools required





Installation instructions

- 1. Drill the appropriate drill size hole into drywall /wallboard, brick or concrete.
- 2. Insert the TripleGrip™ into the hole.
- 2.1. Tap in flush to the wall.
- 3. Insert the screw through the object you need to affix and into the TripleGrip™ up tp the point where the head screw touches the wall to allow the TripleGrip™ to open behind the wall.
- 4. Continue to screw until a firm resistance.

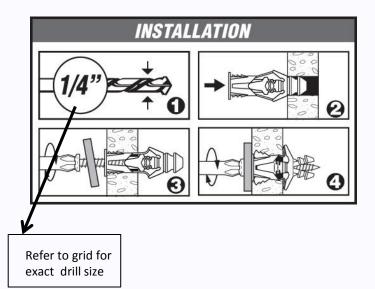

Universal Anchors